


battery powered  
**motion-activated**  
**OUTDOOR NIGHT-LIGHT™**  
**ASSEMBLY AND INSTRUCTION GUIDE**

Model #: 40341 (white)  
 40342 (dark bronze)

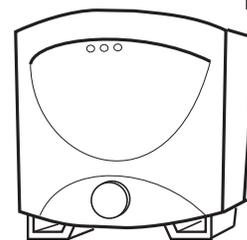


## ABOUT YOUR OUTDOOR NIGHT-LIGHT™

- Light where you need it most! Your Outdoor Night-Light™ will guide you every step of the way.
- Perfect for both indoor and outdoor use. Place your Outdoor Night-Light™ outdoors by the entrance door, and you won't fumble for your keys or the lock anymore. Place it indoors and you no longer have to enter your house in the dark.
- Use it outdoors for steps, doors, walkways, porches, gates, sheds, decks and more.
- Use it indoors for hallways, bathrooms, steps, and any other dark spaces you can imagine.
- The three brilliant LEDs will light your way, preventing you from falling down the stairs or tripping over objects. Great for lighting up dark areas.
- Totally portable and needs no wiring. Uses 3 AA batteries (not included), which will last 6-12 months depending on usage.

## CHOOSING A LOCATION

The selected location should not be near light sources, such as street or porch lighting, as these may cause the Outdoor Night-Light™ to turn off automatically. The Outdoor Night-Light™ should also be installed away from heaters, air conditioners, barbecues, vents, and large reflective surfaces such as swimming pools and jacuzzis, and white walls. To avoid damage to some components, do not aim the motion sensor towards the sun.


At night, the LED lights will remain on for about 45 seconds. The lights gently fade so you know when they are turning off. If a movement is detected while the lights are on, the light duration will be reset and remain on for about another 45 seconds.

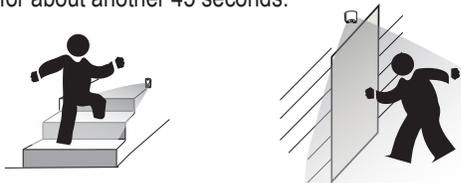

## OPERATING YOUR OUTDOOR NIGHT-LIGHT™


1. Install the batteries (see BATTERY INSTALLATION section).
2. Choose a location (see CHOOSING A LOCATION section).
3. Mount the light (see MOUNTING YOUR OUTDOOR NIGHT LIGHT section), or simply stand the unit on any flat surface.
4. Built-in motion sensor (located below the light) automatically turns on the light when movement in front of the light is detected. The light remains on as long as motion continues to be detected. **Please note that there is no On/Off switch, the light can only be activated by motion.**
5. Built-in photosensor (on bottom) allows the light to only be turned on at night or in darkness, conserving energy.

## BATTERY INSTALLATION

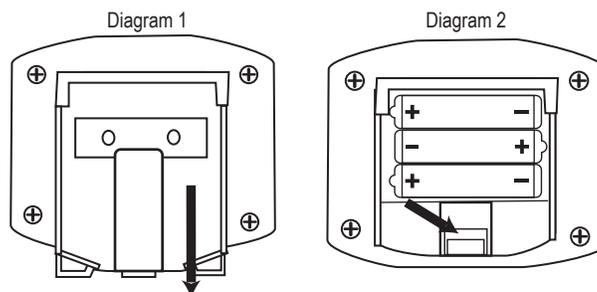

1. To access the battery compartment, slide the tab on the bottom of the mounting plate to "Open" and slide down the mounting plate on the back side of your Outdoor Night-Light™. If the mounting bracket does not slide, please make sure mounting lock is positioned towards the back side of the unit.
2. Then push up the tab of the battery cover inside and replace the batteries according to the orientation noted in Diagram 2.

Your Outdoor Night-Light™ uses three AA batteries. The batteries typically last 6 months to 1 year under normal use.

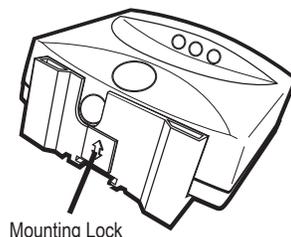


Mounting Lock

**Note: If your Outdoor Night-Light™ does not turn on after battery installation:** Make sure fresh batteries have been inserted matching the correct +/- polarity orientation and are making secure contact with the terminals.

## MOUNTING YOUR OUTDOOR NIGHT-LIGHT™

The Outdoor Night-Light will stand up by itself and doesn't have to be mounted unless it will be standing in a puddle of water.

1. Take out the mounting plate by sliding it down as shown in Battery Installation.
2. If you decide to mount it, please use the included screws as follows: Put the flat side against the wall and use the two screws to install the mounting plate. If you are installing it on a very hard surface, you may need to first drill holes for the screws.
3. The included screw anchors can be used for drywall, cement, brick, or similar surfaces. 3. Slide down the main body of your Outdoor Night-Light™ onto the mounting plate after the plate is attached to the wall. Lock the mounting plate by pushing the mounting lock towards the sensor. (It only moves a fraction of an inch to lock).

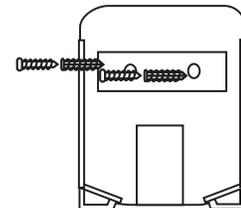

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Light does not turn on when there is movement in the detection area.	<ol style="list-style-type: none"> <li>1. Batteries are old.</li> <li>2. Nearby lighting is too bright.</li> <li>3. The sensor is facing the wrong direction.</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace the batteries with fresh batteries.</li> <li>2. Redirect the sensor or install in a different location, away from other lighting.</li> <li>3. The sensor is directly below the light and should be facing in the direction of movement.</li> </ol>
Light turns on for no apparent reason (false trigger).	<ol style="list-style-type: none"> <li>1. Heat sources such as air conditioners, vents, barbecues, other outside lighting, or moving cars are triggering the motion sensor.</li> <li>2. Pets or other animals are triggering the motion sensor.</li> <li>3. Reflections from swimming pools, jacuzzis, white walls, or other large reflective surfaces are triggering the motion sensor.</li> </ol>	<ol style="list-style-type: none"> <li>1. Install the Outdoor Night-Light™ away from the sources of interference.</li> <li>2. Redirect the sensor.</li> <li>3. Install the Outdoor Night-Light™ away from the sources of reflections.</li> </ol>

## SPECIFICATIONS

**Batteries Required:** 3 AA cell alkaline

**Wattage:** Maximum 0.72 W, static ≤ 0.24 mW

**Voltage:** 4.5 V DC

**Light Duration:** Approximately 45 seconds (± 10 seconds) from last motion detected.

**Motion Sensor Range:** Up to 10 feet when mounted 1 foot or more off the ground.

**Weatherproof Rating:** IP44

## 90 DAY LIMITED WARRANTY

This Motion-Activated Light is warranted against faulty material and/or workmanship for a period of 90 days from date of original purchase. The obligation of the manufacturer, under this warranty, is limited to servicing and replacing defective parts when the unit is returned to MAXSA Innovations, freight pre-paid during the warranty period. To obtain warranty repair, the purchase receipt should be returned with the product.

This warranty becomes void on any unit which has been tampered with, damaged by accident, or damaged otherwise by improper operation.

This guarantee is in addition to any guarantees implied by State or Federal Legislation.



MAXSA Innovations  
 8412 Cathedral Forest Drive  
 Fairfax Station, VA 22039  
 Tel: 703-495-0661  
[www.maxsainnovations.com](http://www.maxsainnovations.com)  
[info@maxsainnovations.com](mailto:info@maxsainnovations.com)

MADE IN CHINA

v13.2

©2012 MAXSA Innovations, LLC