



## Comfy Cruise® 12 Volt Heated Travel Blanket Instructions for Safety, Use, and Care

### SAFETY WARNINGS

The Comfy Cruise Heated Travel Blanket and storage bag should be:

1. Used only by adults or children with adult supervision.
2. Kept away from young children to eliminate the dangers of suffocation and strangulation (this product is not designed for use by infants).
3. Unplugged when not in use or left unattended.
4. Powered only by a fused 12-volt DC power source and not AC current.
5. Used only if the power cord is in good condition (Please keep the power cord from getting caught in a closing door and away from sharp edges that could damage the cord and cause the product to short circuit).
6. Used only when the vehicle is running.
7. Kept away from liquids, heat and flames.
8. Not used if wet or damp.

### USE

This Comfy Cruise Heated Travel Blanket is designed to keep occupants of vehicles warm when they are sitting in a car or other mode of transportation where a 12 volt power supply is available. The blanket should not be used for other purposes. To use the Comfy Cruise follow these easy steps:

1. Identify a 12 volt power receptacle in your vehicle which is in good working order.
2. Start your car so that the blanket (which draws 40 watts) will not drain your car's battery.
3. Plug the blanket plug into the 12 volt receptacle. The red LED light on the plug will illuminate to show the blanket is receiving power.
4. Set the TIME switch on the timer to either 30 or 45 minutes.
5. **Press the ON/OFF button.** The red POWER LED light on the timer will illuminate to show the blanket is on.
6. The blanket may take 10 minutes to reach operating temperature and will heat faster if folded.
7. Once the selected time has elapsed, you will need to push the ON/OFF button on the timer if you want to use the blanket for another 30 or 45 minutes.
8. Unplug the blanket if it gets too hot or after it times out. Always unplug the Comfy Cruise when not in use or before leaving the vehicle.
9. **IMPORTANT SAFETY FEATURE:** For your protection, the blanket will automatically turn off if it overheats. The blanket will not turn on again when you push the ON/OFF button on the timer until it cools down. If this occurs, please wait 30 minutes before turning the blanket back on.

### TROUBLESHOOTING

1. To turn on the blanket:
  - a) Set the TIME switch on the timer to either 30 or 45 minutes.
  - b) Press the ON/OFF button. The red POWER LED light on the timer will illuminate to show the blanket is heating.
2. If the red POWER LED on the timer turns off or does not light up, it may be that the blanket has automatically turned off to prevent it from overheating. If this occurs, wait 30 minutes before pushing the ON/OFF switch to turn the blanket back on.
3. If the LEDs do not light, please check to see if the fuse for the 12 volt receptacle in the vehicle is working. You may also replace the fuse in the blanket plug by unscrewing the plug and replacing the fuse with a 5 amp fuse. Do not attempt to make any other repairs to the Comfy Cruise.
4. If the LED on the timer blinks continually on and off that means a wire inside the blanket is cut and the product will not work. Please either send the product back for replacement if under warranty or dispose of if the product is out of warranty.

### CARE

DRY CLEAN or spot hand wash only. Do not machine wash, machine dry or bleach.

Do not wet the entire blanket. Use the blanket only if it is completely dry.

Made entirely of polyester fleece with polyester trim and stitching. Conforms to 16 CFR 1610.

### 90 DAY LIMITED WARRANTY

MAXSA Innovations, LLC warrants to the original consumer/purchaser that this product shall be free from defects in material and workmanship under normal use and circumstances for a period of ninety (90) days from the date of original purchase for use. When the original consumer/purchaser returns the product pre-paid to MAXSA Innovations, LLC; 8412 Cathedral Forest Dr; Fairfax Station, VA 22039; USA within the warranty period, and if the product is defective, MAXSA Innovation, LLC will at its option repair or replace such.

This warranty shall constitute the sole liability of MAXSA Innovations, LLC expressly disclaims all other warranties INCLUDING, WITHOUT LIMITATION, THE WARRANTIES OF MERCHANT ABILITY AND FITNESS FOR A PARTICULAR PURPOSE. NO PERSON, FIRM, OR CORPORATION IS AUTHORIZED TO ASSUME FOR MAXSA INNOVATIONS, LLC ANY OTHER LIABILITY IN CONNECTION WITH THE SALE AND USE OF THE PRODUCT. MAXSA Innovations, LLC and agents and distributors will bear no liability whatsoever for incidental or consequential damages or charges of any kind.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above disclaimer regarding incidental or consequential damages may not apply to you.

This warranty is void if the product has been damaged or tampered with or if the product or any such parts have been opened. Heavily soiled blankets will not be repaired or replaced. In all cases of damage during shipment, a claim must be filed with the shipping carrier and not with MAXSA Innovations, LLC.

The warranty gives you specific legal rights; you may also have other rights which vary from state to state.



MAXSA Innovations  
8412 Cathedral Forest Drive  
Fairfax Station, VA 22039

Tel: 703-495-0661  
[www.maxsainnovations.com](http://www.maxsainnovations.com)

MADE IN CHINA  
v10.1  
©2010 MAXSA Innovations, LLC